


NEVCO MPC-4 / SCOREBOARD

INSTRUCTIONS FOR GAME PLAY

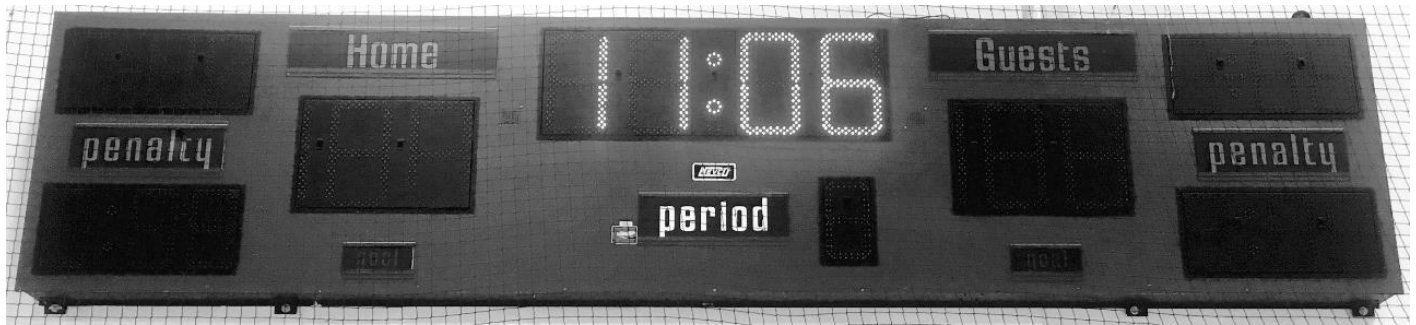

Operation	Control Panel Display/Press These Keys
Pre-Game Setup	1. Start where turned off? [NO] 2. Use an autostart program? [NO] 3. Please enter your model code Press [008-3261] 4. Do you want to use shot clocks? [NO] 5. Use penalty time outs? [NO] 6. Set score to zero [SET] [HOME SCORE] [0] [SET] [GUEST SCORE] [0]
On/Off Timer	1. Use rocker switch at TOP LEFT of control board.
Setting Timer (11min periods & 3 min warmup for NIHL)	1. Set (period) time length [SET] [TIME] [1] [1] [:] [0] [0] [Y] 2. Set period [1,2, or 3] [Y]
Goal Scoring	1. Home Goal [SET] [HOME SCORE] [number] [Y] 2. Guest Goal [SET] [GUEST SCORE] [number] [Y]
Enter Penalty	1. Home OR Guest penalty [SET] [HOME OR GUEST PNLTY] 2. Enter duration of penalty [1] [:] [3] [0] [Y] 3. Enter player # (# doesn't matter) [0] [0] [Y]
Clear Penalty (when goal is scored)	1. Home OR Guest penalty clear [HOME] or [GUEST] 2. Clear penalty [PENALTY CLEAR] [Y]

Additional Info

- NIHL warm up before game is 3min
- NIHL minor penalties are 1:30min
- NIHL period length is 11min